Product Description

08/2022



EGR VALVE CLEANER

For quick removal of stubborn dirt in the intake and exhaust system.

Features:

- · Very good surface wetting
- Short exposure time (15 minutes)
- Excellent cleaning effect on carbonaceous residues
- Without solvents
- Non-flammable

Area of Application:

Cleaning of smaller components in the intake and exhaust system such e.g. EGR valves.

Usage:

- 1. Use only on the disassembled component.
- 2. Spray the surfaces or parts to be cleaned with the cleaning foam at intervals of 5 seconds.
- 3. Let the foam work for at least 15 minutes.
- Rinse the cleaned surface or component with running water and dry it with compressed air. Reinstall the dry component.
- 5. In the case of heavy soiling, it may be necessary to repeat the cleaning (item 2-4) several times.
- 6. Attention! Too much cleaning fluid in the intake area may cause damage when starting or while the engine is running.

Note:

- Use only outdoors or in well-ventilated areas.
- Too much cleaning fluid in the intake area may cause damage when starting or while the engine is running.
- Observe the manufacturer's instructions before working on the intake or exhaust system.
- Use of the product requires sufficient knowledge of the operation of vehicle engines to prevent the possibility of failure or consequential damage.
- Application and system temperature should not fall below 20 °C and not exceed 30 °C.

Container	Article number:
100 ml	40 27289 03463 8

Auto-Teile-Ring GmbH - Marie-Curie-Str. 3 – D-73770 Denkendorf - Tel: +49 (0)711 918979-99 www.cartechnic.de – info@cartechnic.de